



MieleLogic Plus+ control panel 1



Miele control panel 2



Miele Logic Laundry tag

Change language

- Move the Miele Logic Laundry tag along tag reader 1 at the blue LED.
- On control panel 1, select the globe on the bottom-right side to change the language.
- If you use this facility for the first time, please enter the requested activation code.

Start a washing or drying programme

- Sort the laundry by colour and by care label; empty all pockets.
- Load the drum and close the door.
- Move the Miele Logic Laundry tag along tag reader at control panel 1 at the blue LED.
- On control panel 2 of the washer/dryer select a programme using the programme selector. Turn clockwise to reach the options on the right side of the screen (turn to programme selection and press the programme selector).
- You can buy a wash or drying cycle on control panel 1 using a touchscreen system and adapt the amount of detergent and/or fabric softener if desired.
- Select <BUY PROG> to pay.
- On control panel 2 press <START> to finalize.
- To set an SMS reminder at the end of the programme, return to control panel 1 and press the button <SMS?>. SMS? = off and SMS+ = on.*

Making a reservation

- All washing machines can be reserved on all machines (including dryers) and through the internet, unless you have reached your maximum number of reservations.
- Move the Miele Logic Laundry tag along tag reader at control panel 1 at the blue LED.
- Go to <RESERVE> ; <NEW> at control panel 1.
- Select <DATE> and <TIME>, change the machine if desired and confirm with <OK>.
- If you want to be reminded of the reservation with a text message: select <SMS+> on the <RESERVE> screen. Here you can enter a time and your mobile phone number. SMS? = off SMS+ = on.* You pay extra for an SMS.

*Attention: After you change the SMS setting it is always set to on or off, until you change it again!