




Multi-function selector and display

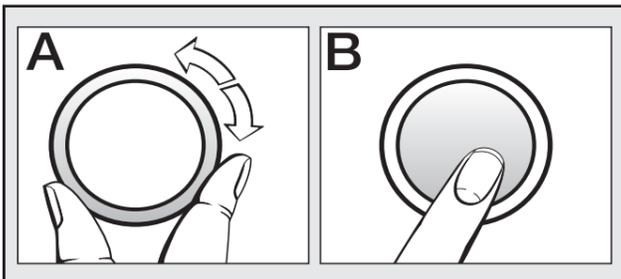

Multi-function selector

Turn the multi-function selector to highlight the next option.
Press the multi-function selector to select the highlighted option.

Select the language

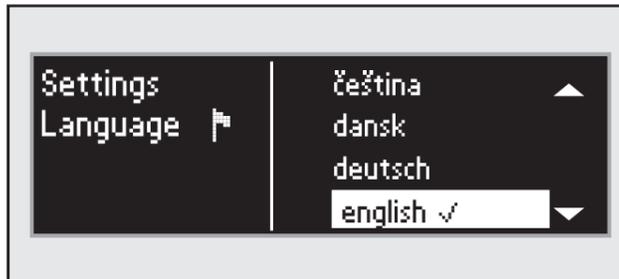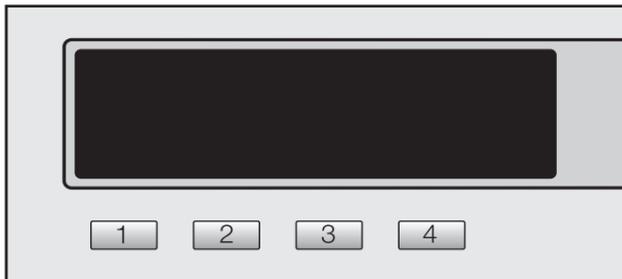


Short cut buttons

Press the **1** **2** **3** or **4** button to select one of the 4 programmes (on the left of the display). The short cut buttons have different functions in the other menus.

The flag acts as a guide to prevent a language which will not be understood being set.


- Select and confirm the language you want.

1 Load the drum

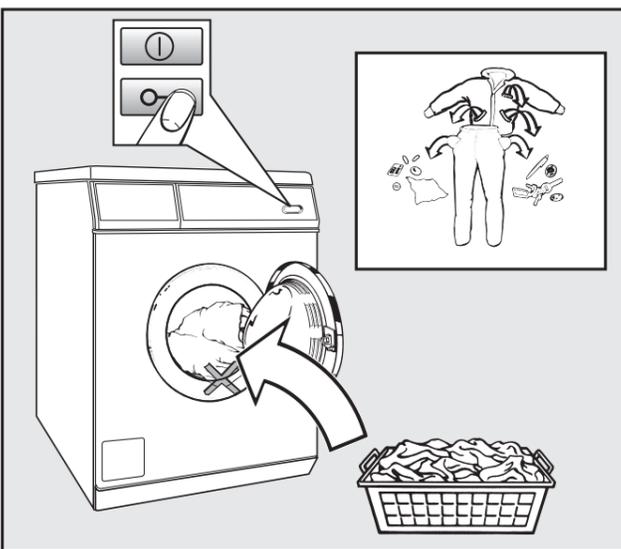


- Switch the washer extractor on ① and open the door .
- Load the laundry (check the symbol on the care label).
- Shut the door with a gentle swing. Make sure items do not get caught in the door opening.

2 Add detergent

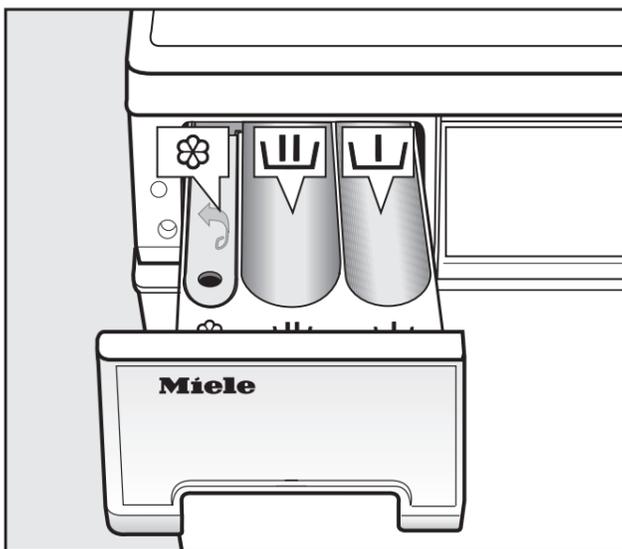


- = Detergent for pre-wash
- = Detergent for the main wash
- = Fabric conditioner or liquid starch

3 Select and start the programme

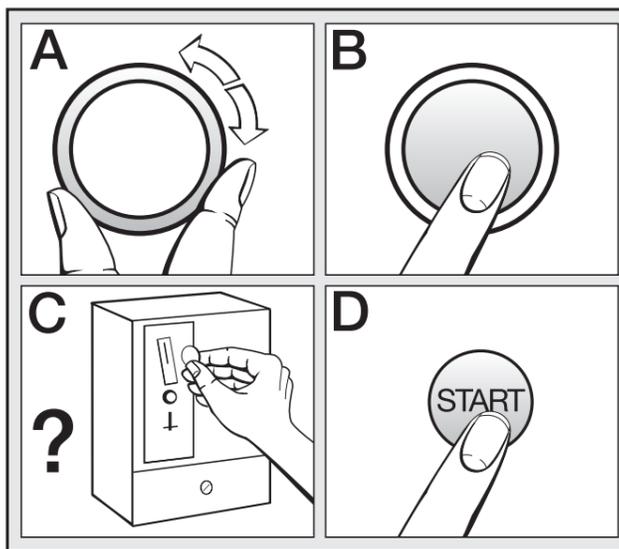


- Select a programme and confirm your selection (A + B).
- If the machine has a payment system, insert payment (C).
- Press the *START* button (D).

4 Remove the laundry

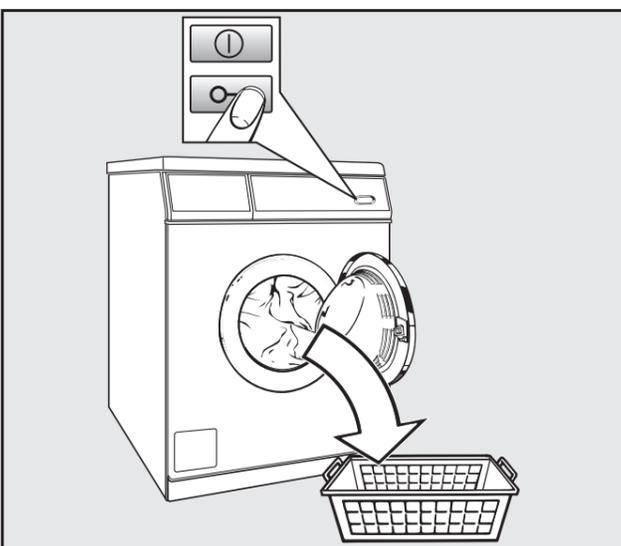


- Finish will appear in the display.
- Open the door and remove the laundry.

To open the door during a power cut ... on machines with a drain pump

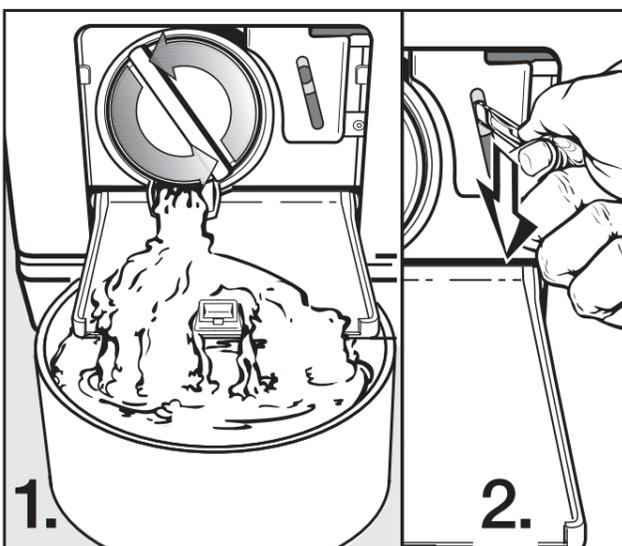

- Open the drain filter access flap.
- Drain the water into a suitable large container. Be careful - the water may be very hot.
- Open the door using a spoon handle or similar.

To open the door during a power cut ... on machines with a dump valve

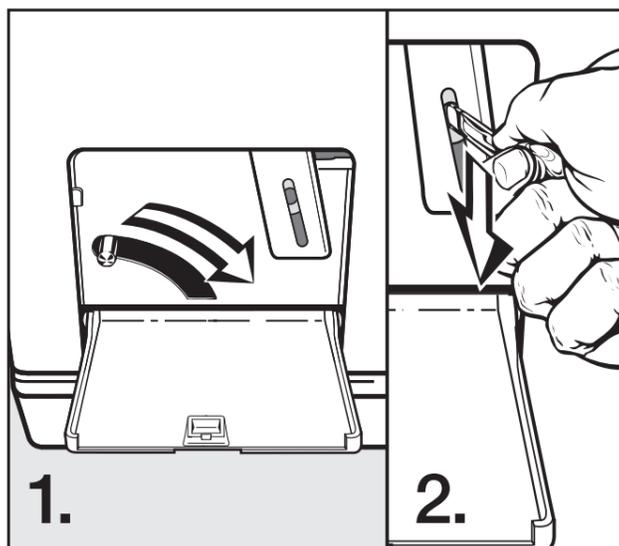

- Open the drain filter access flap.
- Drain the machine.
- Open the door using a spoon handle or similar.

Basic programmes		Max. load: PW 6055 Vario / PW 6065 Vario
Cottons Hygiene 70°C to 95°C  		Max. 5.5 kg / 6.5 kg
Fabric	Cotton, linen or cotton mix fabrics, e.g. bed linen, baby clothing, underwear.	
Detergent	Universal detergent	
Cottons Uni. cold to 60°C   		Max. 5.5 kg / 6.5 kg
Fabric	Cotton or cotton mix fabrics, e.g. T-shirts, trousers.	
Note	For dark coloured fabrics use a detergent for coloured fabrics, or liquid detergent.	
Detergent	Universal detergent and detergent for coloured fabrics	
Minimum iron 30°C to 60°C   		Max. 3.0 kg / 3.5 kg
Fabric	Synthetic, mixed fibre and easy care cotton garments, e.g. shirts and blouses.	
Detergent	Universal detergent and detergent for coloured fabrics	
Delicates 30°C to 60°C  		Max. 2.0 kg / 2.5 kg
Fabric	For delicate synthetic, mixed fibre, rayon and easy care cotton garments.	
Detergent	Liquid detergent for delicates	
Woollens  cold to 40°C		Max. 2.0 kg / 2.5 kg
Fabric	Machine-washable or hand-washable wool or wool blend fabrics. If the care label does not specify a temperature, wash using the cold setting.	
Detergent	Liquid detergent for machine-washable woollens	
Quick wash cold to 40°C  		Max. 3.0 kg / 3.5 kg
Fabric	Very lightly soiled fabrics which can be washed in a <i>Cottons</i> programme.	
Detergent	Universal detergent and detergent for coloured fabrics	
Silks  cold to 30°C		Max. 2.0 kg / 2.5 kg
Fabric	Silks and other hand-washable fabrics with no wool content, e.g. satin, lace and silk.	
Note	Place socks, tights, bras etc. in a washing bag.	
Detergent	Liquid detergent for delicates	
Shirts cold to 60°C		Max. 2.0 kg / 2.5 kg
Fabric	Shirts and blouses	
Note	Pre-treat collars and cuffs if necessary. Wash silk garments in the <i>Silks</i> programme.	
Detergent	Universal detergent and detergent for coloured fabrics	
Intensive wash 40°C to 60°C		Max. 5.5 kg / 6.5 kg
Fabric	Heavily soiled cotton, linen and mixed fibre fabrics.	
Detergent	Universal detergent and detergent for coloured fabrics	
Outer wear cold to 40°C		Max. 2.5 kg / 3.0 kg
Fabric	Outerwear made from micro-fibre fabrics such as Gore-Tex [®] , Sympatex [®] , Windstopper [®] etc.	
Note	Zip up jackets before washing. Do not use fabric conditioner.	
Detergent	Liquid detergent for delicates	
Proofing		Max. 2.5 kg / 3.0 kg
Fabric	For treating microfibre fabrics, ski wear, fine closeweave cotton garments (poplin) or tablecloths with a water and dirt resistant finish.	
Proofing agents	Only use proofing agents which are stated by the manufacturer as being suitable for use on membrane textiles. Do not use proofing agents which contain paraffin. Add proofing agents to compartment  .	
Towelling 40°C to 95°C		max. 5.5 kg / 6.5 kg
Note	For dark coloured fabrics use a detergent for coloured fabrics.	
Detergent	Universal detergent	